

Ballast Compatible led tube

Tested Ballast List

Item	Manufacturer	Model	Type	Compatible
1	Philips-Advance	ICN-IP32-N	Instant Start Ballast	✓
2	Philips-Advance	ICN-2P32-N	Instant Start Ballast	✓
3	Philips-Advance	ICN-3P32-N	Instant Start Ballast	✓
4	Philips-Advance	ICN-4P32-N	Instant Start Ballast	✓
5	Philips-Advance	IOPA-IP32-N	Instant Start Ballast	✓
6	Philips-Advance	IOPA-2P32-N	Instant Start Ballast	✓
7	Philips-Advance	IOPA-3P32-N	Instant Start Ballast	✓
8	Philips-Advance	IOPA-4P32-N	Instant Start Ballast	✓
9	Philips-Advance	IOPA-IP32-HL-SC	Instant Start Ballast	✓
10	Philips-Advance	IOPA-2P32-HL-SC	Instant Start Ballast	✓
11	Philips-Advance	IOPA-3P32-HL-SC	Instant Start Ballast	✓
12	Philips-Advance	IOPA-4P32-HL-SC	Instant Start Ballast	✓
13	Philips-Advance	ICN-IP32-SC	Instant Start Ballast	✓
14	Philips-Advance	ICN-2P32-SC	Instant Start Ballast	✓
15	Philips-Advance	ICN-3P32-SC	Instant Start Ballast	✓
16	Philips-Advance	ICN-4P32-SC	Instant Start Ballast	✓
17	Philips-Advance	REB-1P32-SC	Instant Start Ballast	✓
18	Philips-Advance	REB-2P32-SC	Instant Start Ballast	✓
19	Philips-Advance	REB-3P32-SC	Instant Start Ballast	✓
20	Philips-Advance	REB-4P32-SC	Instant Start Ballast	✓
21	Philips-Advance	IOP-1P32-LW-SC	Instant Start Ballast	✓
22	Philips-Advance	IOP-2P32-LW-SC	Instant Start Ballast	✓
23	Philips-Advance	IOP-3P32-LW-SC	Instant Start Ballast	✓
24	Philips-Advance	IOP-4P32-LW-SC	Instant Start Ballast	✓
25	Philips-Advance	IOPA-1P32-LW-N	Instant Start Ballast	✓
26	Philips-Advance	IOPA-2P32-LW-N	Instant Start Ballast	✓
27	Philips-Advance	IOPA-3P32-LW-N	Instant Start Ballast	✓
28	Philips-Advance	IOPA-4P32-LW-N	Instant Start Ballast	✓
29	Philips-Advance	IOPA-1P32-N	Instant Start Ballast	✓
30	Philips-Advance	IOPA-2P32-N	Instant Start Ballast	✓
31	Philips-Advance	IOPA-3P32-N	Instant Start Ballast	✓
32	Philips-Advance	IOPA-4P32-N	Instant Start Ballast	✓
33	Philips-Advance	IOP-1P32-SC	Instant Start Ballast	✓
34	Philips-Advance	IOP-2P32-SC	Instant Start Ballast	✓
35	Philips-Advance	IOP-3P32-SC	Instant Start Ballast	✓
36	Philips-Advance	IOP-4P32-SC	Instant Start Ballast	✓
37	Philips-Advance	IOPA-1P32-HL-SC	Instant Start Ballast	✓
38	Philips-Advance	IOPA-2P32-HL-SC	Instant Start Ballast	✓
39	Philips-Advance	IOPA-3P32-HL-SC	Instant Start Ballast	✓
40	Philips-Advance	IOPA-4P32-HL-SC	Instant Start Ballast	✓
41	Philips-Advance	IOP-1PSP32-HL-SC	Program Start Ballast	✓
42	Philips-Advance	IOP-2PSP32-HL-SC	Program Start Ballast	✓
43	Philips-Advance	IOP-3PSP32-HL-SC	Program Start Ballast	✓
44	Philips-Advance	IOP-4PSP32-HL-SC	Program Start Ballast	✓
45	Philips-Advance	IOP-1PSP32-HL-SC	Program Start Ballast	✓
46	Philips-Advance	IOP-2PSP32-HL-SC	Program Start Ballast	✓
47	Philips-Advance	IOP-3PSP32-HL-SC	Program Start Ballast	✓
48	Philips-Advance	IOP-4PSP32-HL-SC	Program Start Ballast	✓



Item	Manufacturer	Model	Type	Compatible
49	Philips-Advance	IOP-IPSP32-LW-SC	Program Start Ballast	✓
50	Philips-Advance	IOP-2PSP32-LW-SC	Program Start Ballast	✓
51	Philips-Advance	IOP-3PSP32-LW-SC	Program Start Ballast	✓
52	Philips-Advance	IOP-4PSP32-LW-SC	Program Start Ballast	✓
53	Philips-Advance	IOP-IPSP32-SC	Program Start Ballast	✓
54	Philips-Advance	IOP-2PSP32-SC	Program Start Ballast	✓
55	Philips-Advance	IOP-3PSP32-SC	Program Start Ballast	✓
56	Philips-Advance	IOP-4PSP32-SC	Program Start Ballast	✓
57	Philips-Advance	GOPA-1P32-SC	Instant Start Ballast	✓
58	Philips-Advance	GOPA-2P32-SC	Instant Start Ballast	✓
59	Philips-Advance	GOPA-3P32-SC	Instant Start Ballast	✓
60	Philips-Advance	GOPA-4P32-SC	Instant Start Ballast	✓
61	Philips-Advance	GOP-IPSP32-SC	Instant Start Ballast	✓
62	Philips-Advance	GOP-2PSP32-SC	Instant Start Ballast	✓
63	Philips-Advance	GOP-3PSP32-SC	Instant Start Ballast	✓
64	Philips-Advance	GOP-4PSP32-SC	Instant Start Ballast	✓
65	Philips-Advance	GOPA-1P32-LW-SC	Instant Start Ballast	✓
66	Philips-Advance	GOPA-2P32-LW-SC	Instant Start Ballast	✓
67	Philips-Advance	GOPA-3P32-LW-SC	Instant Start Ballast	✓
68	Philips-Advance	GOPA-4P32-LW-SC	Instant Start Ballast	✓
69	Philips-Advance	HOP-2PSP32-HL-SC	Program Start Ballast	✓
70	Philips-Advance	HOP-3PSP32-HL-SC	Program Start Ballast	✓
71	Philips-Advance	HOP-4PSP32-HL-G	Program Start Ballast	✓
72	Philips-Advance	IOP-3P32-HL-90-SC	Instant Start Ballast	✓
73	Philips-Advance	IOPA-4P32-HL-90-SC	Instant Start Ballast	✓
74	Philips-Advance	RELB-2S40-N	Rapid Start Ballast	✓
75	Philips-Advance	ICN-2S40-N	Rapid Start Ballast	✓
76	Philips-Advance	ICN-2S24	Program Start Ballast	✓
77	Philips-Advance	ICN-2S24-N	Program Start Ballast	✓
78	Philips-Advance	ICN-2S39	Program Start Ballast	✓
79	Philips-Advance	ICN-2S39-N	Program Start Ballast	✓
80	Philips-Advance	ICN-2S28	Program Start Ballast	✓
81	Philips-Advance	ICN-2S28-N	Program Start Ballast	✓
82	Philips-Advance	ICN-2S54	Program Start Ballast	✓
83	Philips-Advance	ICN-2S54-N	Program Start Ballast	✓
84	GE	GE-132-MAX-N/Ultra	Instant Start Ballast	✓
85	GE	GE-232-MAX-N/Ultra	Instant Start Ballast	✓
86	GE	GE-332-MAX-N/Ultra	Instant Start Ballast	✓
87	GE	GE-432-MAX-N/Ultra	Instant Start Ballast	✓
88	GE	GE-132-MAX-L/Ultra	Instant Start Ballast	✓
89	GE	GE-232-MAX-L/Ultra	Instant Start Ballast	✓
90	GE	GE-332-MAX-L/Ultra	Instant Start Ballast	✓
91	GE	GE-432-MAX-L/Ultra	Instant Start Ballast	✓
92	GE	GE-132-MAX-H/Ultra	Instant Start Ballast	✓
93	GE	GE-232-MAX-H/Ultra	Instant Start Ballast	✓
94	GE	GE-332-MAX-H/Ultra	Instant Start Ballast	✓
95	GE	GE-432-MAX-H/Ultra	Instant Start Ballast	✓
96	GE	B132PUNVHP-N	Program Rapid Start Ballast	✓
97	GE	B232PUNVHP-N	Program Rapid Start Ballast	✓
98	GE	B332PUNVHP-A	Program Rapid Start Ballast	✓
99	GE	B432PUNVHP-A	Program Rapid Start Ballast	✓
100	GE	B332I347HP	Program Rapid Start Ballast	✓
101	GE	B228PUNV-C	Program Rapid Start Ballast	✓
102	GE	B224PUNV-C	Program Rapid Start Ballast	✓
103	GE	B239PUNV-D	Program Rapid Start Ballast	✓
104	GE	B254PUNV-D	Program Rapid Start Ballast	✓

Item	Manufacturer	Model	Type	Compatible
105	GE	B140R120HP	Instant Start Ballast	✓
106	GE	B140R277HP	Instant Start Ballast	✓
107	GE	B240R120HP	Instant Start Ballast	✓
108	GE	B240R277HP	Instant Start Ballast	✓
109	GE	B332I347HP	Instant Start Ballast	✓
110	GE	B340R120HP	Program Rapid Start Ballast	✓
111	GE	B340R277HP	Program Rapid Start Ballast	✓
112	GE	B260I120HP	Instant Start Ballast	✓
113	GE	B260I277HP	Instant Start Ballast	✓
114	GE	B260I120RH	Instant Start Ballast	✓
115	GE	B260I277RH	Instant Start Ballast	✓
116	GE	697-L-TC-P-IP	Rapid Start Ballast	✓
117	GE	573-L-TC-P-IP	Rapid Start Ballast	✓
118	GE	588-L-TC-P-IP	Rapid Start Ballast	✓
119	GE	413-C-TC-P-IP	Rapid Start Ballast	✓
120	GE	412-L-SLH-TC-P-IP	Rapid Start Ballast	✓
121	GE	458-L-SLH-TC-P-I	Rapid Start Ballast	✓
122	GE	446-L-SLH-TC-P	Rapid Start Ballast	✓
123	GE	537-L-TC-P-I	Rapid Start Ballast	✓
124	GE	443-L-SLH-TC-P	Rapid Start Ballast	✓
125	GE	490-XLH-TC-P	Rapid Start Ballast	✓
126	GE	627-LH-TC-P-IP	Rapid Start Ballast	✓
127	GE	480-SLH-TC-P-IP	Rapid Start Ballast	✓
128	GE	480-XLH-TC-P-IP	RapidStart Ballast	✓
129	GE	487-SLH-TC-P-IP	Rapid Start Ballast	✓
130	GE	487-XLH-TC-P-IP	Rapid Start Ballast	✓
131	GE	960-VLH-TC-P-IP	Rapid Start Ballast	✓
132	GE	532-BR-TC-P-IP▶	Instant Start Ballast	✓
133	GE	213-TC-P-IP	Instant Start Ballast	✓
134	GE	B132IUNVHE-A	Program Rapid Start Ballast	✓
135	GE	B232IUNVHE-A	Program Rapid Start Ballast	✓
136	GE	B332IUNVHE-A	Program Rapid Start Ballast	✓
137	SYLVANIA	QHE 1X32T8/UNV ISL-SC	Instant Start Ballast	✓
138	SYLVANIA	QHE 2X32T8/UNV ISL-SC	Instant Start Ballast	✓
139	SYLVANIA	QHE 3X32T8/UNV ISL-SC	Instant Start Ballast	✓
140	SYLVANIA	QHE 4X32T8/UNV ISL-SC	Instant Start Ballast	✓
141	SYLVANIA	QHE 1X32T8/UNV ISN-SC	Instant Start Ballast	✓
142	SYLVANIA	QHE 2X32T8/UNV ISN-SC	Instant Start Ballast	✓
143	SYLVANIA	QHE 3X32T8/UNV ISN-SC	Instant Start Ballast	✓
144	SYLVANIA	QHE 4X32T8/UNV ISN-SC	Instant Start Ballast	✓
145	SYLVANIA	QHE 1X32T8/UNV ISH-SC	Instant Start Ballast	✓
146	SYLVANIA	QHE 2X32T8/UNV ISH-SC	Instant Start Ballast	✓
147	SYLVANIA	QHE 3X32T8/UNV ISH-SC	Instant Start Ballast	✓
148	SYLVANIA	QHE 4X32T8/UNV ISH-SC	Instant Start Ballast	✓
149	SYLVANIA	QTP 1X32T8/UNV ISL-SC	Instant Start Ballast	✓
150	SYLVANIA	QTP 2X32T8/UNV ISL-SC	Instant Start Ballast	✓
151	SYLVANIA	QTP 3X32T8/UNV ISL-SC	Instant Start Ballast	✓
152	SYLVANIA	QTP 4X32T8/UNV ISL-SC	Instant Start Ballast	✓
153	SYLVANIA	QTP 1X32T8/UNV ISN-SC	Instant Start Ballast	✓
154	SYLVANIA	QTP 2X32T8/UNV ISN-SC	Instant Start Ballast	✓
155	SYLVANIA	QTP 3X32T8/UNV ISN-SC	Instant Start Ballast	✓
156	SYLVANIA	QTP 4X32T8/UNV ISN-SC	Instant Start Ballast	✓
157	SYLVANIA	QTP 1X32T8/UNV ISH-SC	Instant Start Ballast	✓
158	SYLVANIA	QTP 2X32T8/UNV ISH-SC	Instant Start Ballast	✓
159	SYLVANIA	QTP 3X32T8/UNV ISH-SC	Instant Start Ballast	✓
160	SYLVANIA	QTP 4X32T8/UNV ISH-SC	Instant Start Ballast	✓

Item	Manufacturer	Model	Type	Compatible
161	SYLVANIA	QTP 1x32T8/UNV PSX-TC	Program Start Ballast	✓
162	SYLVANIA	QTP 2x32T8/UNV PSX-TC	Program Start Ballast	✓
163	SYLVANIA	QTP 3x32T8/UNV PSX-TC	Program Start Ballast	✓
164	SYLVANIA	QTP 4x32T8/UNV PSX-TC	Program Start Ballast	✓
165	SYLVANIA	QTP 1x32T8/UNV PSN-TC	Program Start Ballast	✓
166	SYLVANIA	QTP 2x32T8/UNV PSN-TC	Program Start Ballast	✓
167	SYLVANIA	QTP 3x32T8/UNV PSN-SC	Program Start Ballast	✓
168	SYLVANIA	QTP 4x32T8/UNV PSN-SC	Program Start Ballast	✓
169	SYLVANIA	QHE2x32T8/UNV-PSH-HT	Program Start Ballast	✓
170	SYLVANIA	QHE3x32T8/UNV-PSH-HT	Program Start Ballast	✓
171	SYLVANIA	QHE4x32T8/UNV-PSH-HT	Program Start Ballast	✓
172	SYLVANIA	QHE 1X32T8/347 ISL-SC	Instant Start Ballast	✓
173	SYLVANIA	QHE 2X32T8/347 ISL-SC	Instant Start Ballast	✓
174	SYLVANIA	QHE 3X32T8/347 ISL-SC	Instant Start Ballast	✓
175	SYLVANIA	QHE 4X32T8/347 ISL-SC	Instant Start Ballast	✓
176	SYLVANIA	QHE 1X32T8/347 ISN-SC	Instant Start Ballast	✓
177	SYLVANIA	QHE 2X32T8/347 ISN-SC	Instant Start Ballast	✓
178	SYLVANIA	QHE 3X32T8/347 ISN-SC	Instant Start Ballast	✓
179	SYLVANIA	QHE 4X32T8/347 ISN-SC	Instant Start Ballast	✓
180	SYLVANIA	QT2X32T8/347 ISL-SC	Instant Start Ballast	✓
181	SYLVANIA	QT4X32T8/347 ISL-SC	Instant Start Ballast	✓
182	SYLVANIA	QTP1X32T8/347 ISN-SC	Instant Start Ballast	✓
183	SYLVANIA	QTP2X32T8/347 ISN-SC	Instant Start Ballast	✓
184	SYLVANIA	QT3X32T8/347 ISN-SC	Instant Start Ballast	✓
185	SYLVANIA	QT4X32T8/347 ISN-SC	Instant Start Ballast	✓
186	SYLVANIA	QT2X32T8/347 ISH-SC	Instant Start Ballast	✓
187	SYLVANIA	QTP 2x39-24T5HO/UNV PSN NL	Program Start Ballast	✓
188	SYLVANIA	QTP 2x39-24T5HO/UNV PSN NL	Program Start Ballast	✓
189	SYLVANIA	QTP 2x54 T5HO/UNV PSN NL	Program Start Ballast	✓
190	SYLVANIA	QTP 2x28 T5/UNV PSN NL	Program Start Ballast	✓
191	SYLVANIA	QTP 2x54 T5HO/UNV PSN HT NL	Program Rapid Start Ballast	✓
192	SYLVANIA	QTP 4x54 T5HO/UNV PSN HTW NL	Program Rapid Start Ballast	✓
193	GE	GE-232-120RED-DIY	? Start Ballast	✓
194	GE	GE-432-120RED-DIY	? Start Ballast	✓
195	GE	GE-232-120-N	? Start Ballast	✓
196	GE	GE-432-120-N	?Rapid Start Ballast	✓
197	GE	GE-132-MV-N	Instant Start Start Ballast	✓
198	GE	GE-232-MV-N	Instant Start Start Ballast	✓
199	GE	GE-332-MV-N	Instant Start Ballast	✓
200	GE	GE-432-MV-N	Instant Start Ballast	✓
201	GE	GE-132-MV-N-DIY	Instant Start Ballast	✓
202	GE	GE-232-MV-N-DIY	Instant Start Ballast	✓
203	GE	GE-332-MV-N-DIY	Instant Start Ballast	✓
204	GE	GE-432-MV-N-DIY	Instant Start Ballast	✓
205	GE	GE232MAX347-N	Instant Start Ballast	✓
206	GE	GE432MAX347-N	Instant Start Ballast	✓
207	SUNPARK	U-1/32ISE-HBF	Instant Start Ballast	✓
208	SUNPARK	U-2/32ISE-HBF	Instant Start Ballast	✓
209	SUNPARK	U-3/32ISE-HBF	Instant Start Ballast	✓
210	SUNPARK	U-4/32ISE-HBF	Instant Start Ballast	✓
211	SUNPARK	U-1/32ISE-LBF	Instant Start Ballast	✓
212	SUNPARK	U-2/32ISE-LBF	Instant Start Ballast	✓
213	SUNPARK	U-3/32ISE-LBF	Instant Start Ballast	✓
214	SUNPARK	U-4/32ISE-LBF	Instant Start Ballast	✓
215	HOWARD	EP3/32IS/MV/MC/HE	Instant Start Ballast	✓
216	KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start Ballast	✓

Item	Manufacturer	Model	Type	Compatible
217	KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start Ballast	✓
218	PROLUME	EP232IS/L/MV/SL	Instant Start Ballast	✓
219	PROLUME	EP232IS/L/MV/HE	Instant Start Ballast	✓
220	RADIONIC	E232H12	Instant Start Ballast	✓